

REPLACEMENT PROCEDURE

- Unscrew the two locking screws, using a 3mm Allen key
- Remove the casing from its slot
- Disconnect the power cable of the cooling fan



NOTE!

Do not overtighten the fixing screws.
If you tighten them too much, the housing may break.
[damage not covered by warranty]

COMPONENT SETUP

- Connect the power cable of the cooling fan on the crankcase to the female connection on the engine of the trainer ^[1]
- Insert the crankcase with the rectangular slot upwards, and the cooling fan at the front
- Center the screw holes
- Tighten the two locking screws, using a 3mm Allen key ^[2]

